


# NO-TOUCH HAND SANITIZER DISPENSER

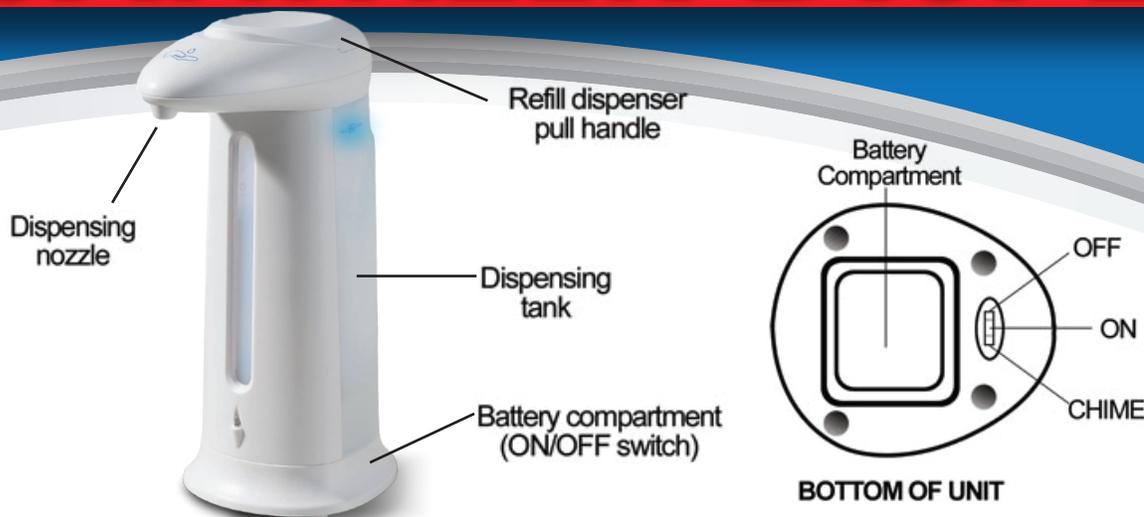

**Warning :** This dispenser is designed to dispense standard liquid sanitizer. Foam sanitizers or sanitizers that contain granule must not be used as they can block the nozzle. Never immerse the unit in water. Always place the unit with liquid container upright. Do not mix with other sanitizers.

### Installing Batteries:

- 1) Ensure the unit switch on the bottom is in the OFF position.
- 2) Remove the battery compartment cover located on the bottom of the unit.
- 3) Install 4 x AAA 1.5V batteries observing proper polarity ( +/ - ) as indicated in the compartment.
- 4) Replace the battery cover compartment.

*Tip: Avoid accidental spillage by installing batteries before filling the dispensing tank.*

*Tip: Replace the old batteries with fresh batteries when the automatic dispensing becomes weak.*

### Adding Sanitizer to the dispensing tank:

- 1) Ensure the unit switch on the bottom is in the OFF position
- 2) Access the dispensing tank by lifting the pull handle on the top of the unit up.
- 3) Fill the dispensing tank with liquid sanitizer of your choice.
- 4) Replace cover ensuring it is secure.

Notice: Ensure the dispensing tank is never filled above the "MAX" level marked on the outside of the tank.

### Activating or Deactivating Automatic Dispensing, Musical-Confirmation Chime and LED Illuminating Indicator:

- 1) To turn automatic dispensing on, slide the switch on the bottom of the unit to "ON"
- 2) To turn automatic dispensing and musical confirmation on, slide the switch to "CHIME"
- 3) Once activated, a built-in LED on the front of the unit will become lit.
- 4) Put your hand under the dispensing nozzle, the built-in infrared sensor will detect your hand and dispense the appropriate amount of sanitizer.
- 5) Slide the switch to OFF to deactivate both automatic dispensing and musical-confirmation chime and the built-in LED indicator inside the dispensing tank goes out.

Tip: Upon your first fill up, dispense liquid several times to prime the tube. Repeat this step after every fresh sanitizer fill up.

Manufactured for:  
**CREATIVE CONCEPTS MANUFACTURING LTD**  
 Suite F2, 3F Phase 2, Hang Fung Ind.Bldg., No.2G Hok Yuen Street, Hung Hom, Kowloon, Hong Kong

Distributed by:  
**CREATIVE CONCEPTS USA**  
 Hoboken, NJ 07030, USA

**CREATIVE CONCEPTS EUROPE LTD**  
 London, NW6 7 JR, UK



**CREATIVE CONCEPTS ITALIA SRL**  
 40126 Bologna, Italy

Item # 02697  
 Made in China  
**NTHSD\_IM\_ENG\_050420**